

MK-1 Tip 011

Attaching whistle to MK-1 Life Preserver

1. Ensure work surface is clean and free from debris.
2. Obtain fibrous cord, MIL-C-5040B, Type I (SPMIG 03998); cut cord so doubled cord from whistle's attachment point to pocket grommet will be between 22 and 26 inches, when attached. (Figure 1)

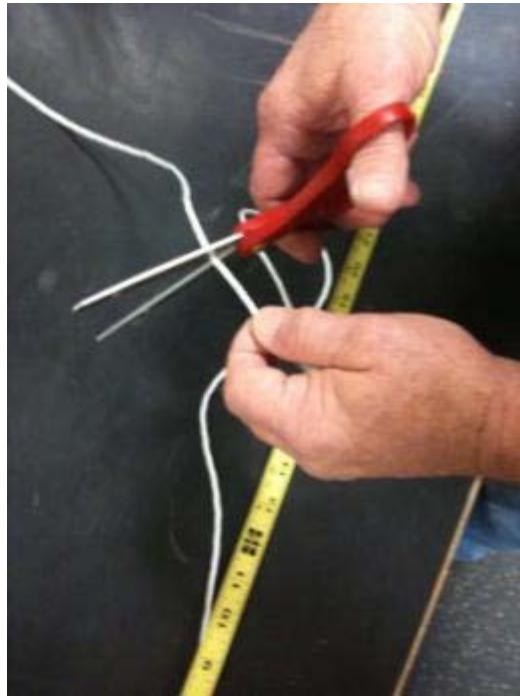


Figure1

3. Visually inspect whistle for damage and cracks. (Figure2)



Figure 2

4. Bring cord ends together, pass cord end through whistle attachment point and attach doubled cord to whistle with a bowline knot. (Figure 3)



Figure 3

5. Attach doubled cord to pouch grommet with a bowline knot. (Figure 4)



Figure 4

6. Verify cord length from whistle's attachment point to life preserver's attachment point (grommet) is 22 to 26 inches. (Figure 5 and 6)

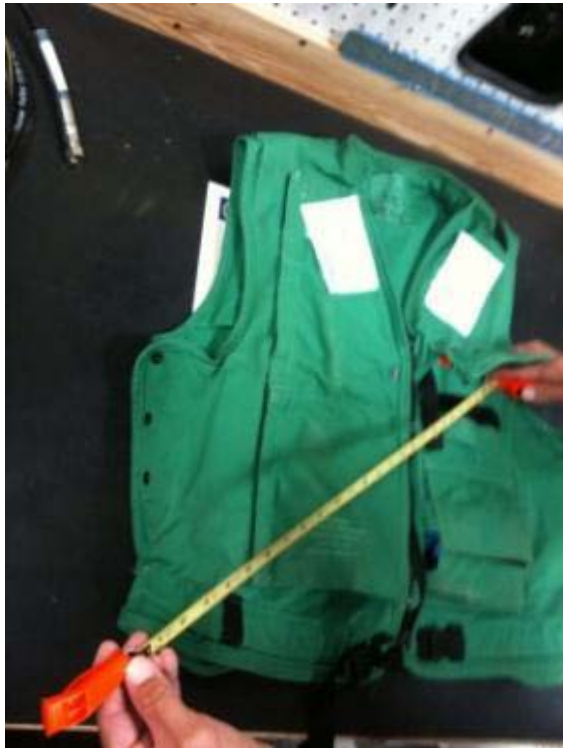


Figure 5



Figure 6

7. Wrap cord around whistle and Stow whistle in pouch. (Figure 7 and 8)



Figure 7



Figure 8